
DIFFUSER ASSEMBLY




RF1636009



RF1636030

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

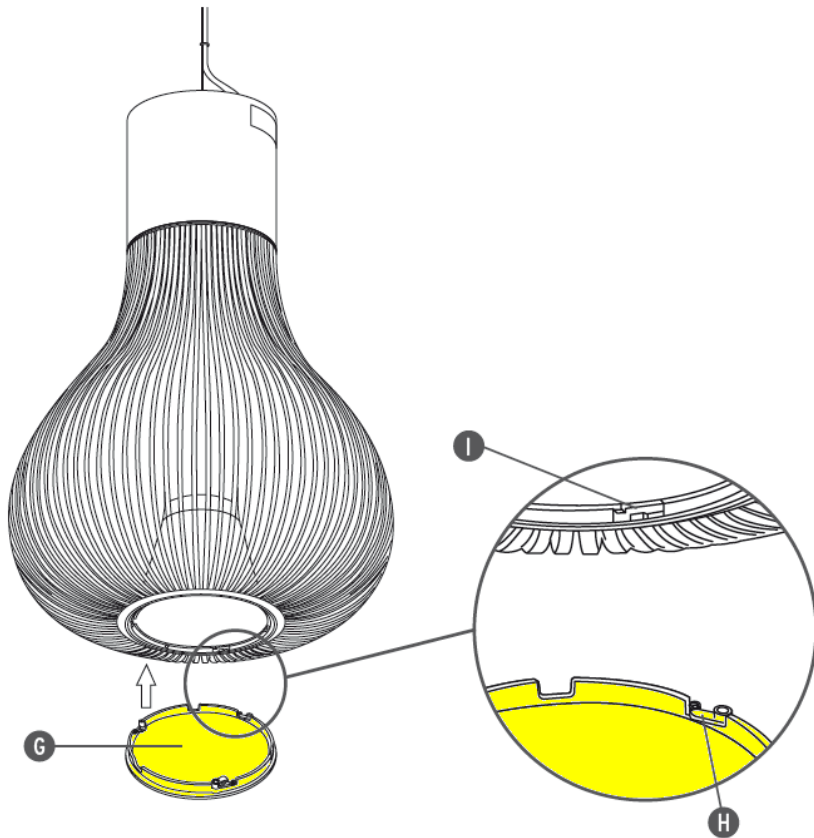

Insert the diffuser (G) in the diffuser ring ensuring to position the three hooks (H) of the diffuser in correspondence of the appropriate made openings (I) of the ring, as shown in the image, and then lock the diffuser by rotating clockwise the knobs present on the diffuser (G).