

RFU980510

E26 LAMPHOLDER ASSEMBLY




WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.

For the installation of the spare-part, it is necessary to consult a qualified electrician.

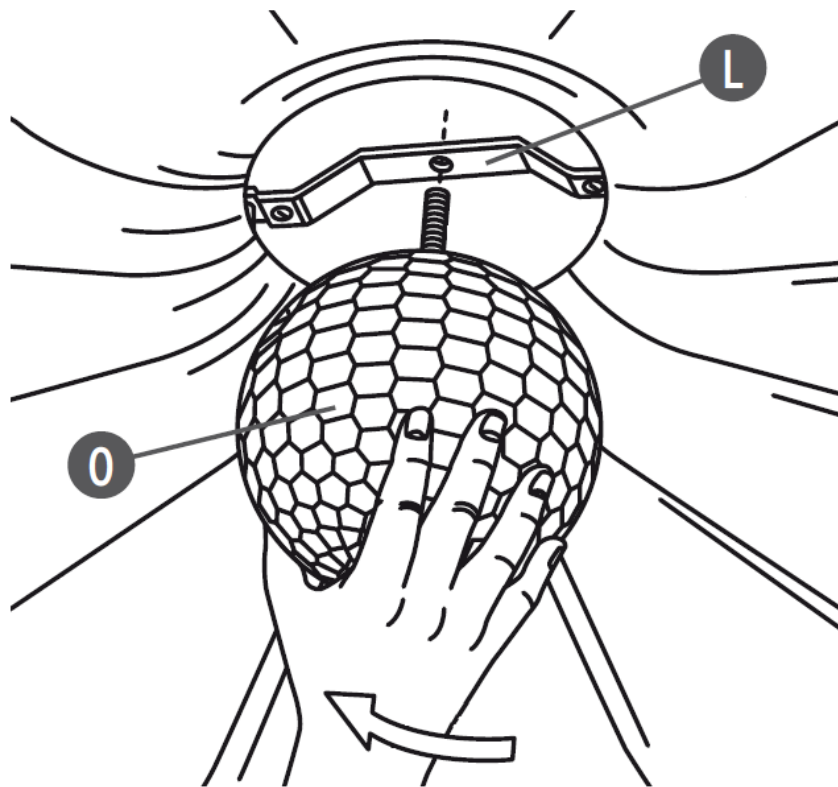


Unfasten the crystal ball sphere (O) from the bracket (L).

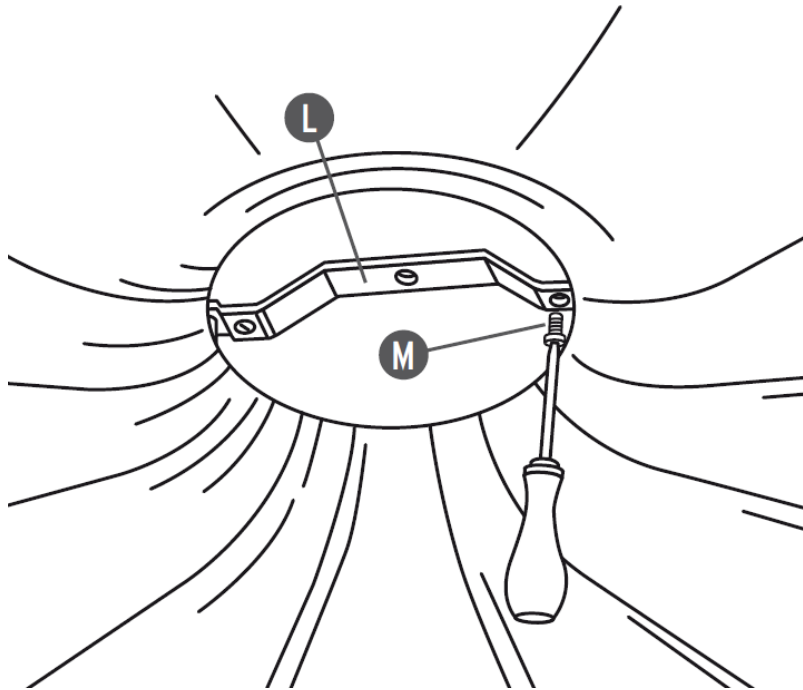


Remove the bracket (L) from the bottom hole, by unfastening the two fixing screws (M).

REMARKS! If present the lamp-bulbs, we recommend to remove them.

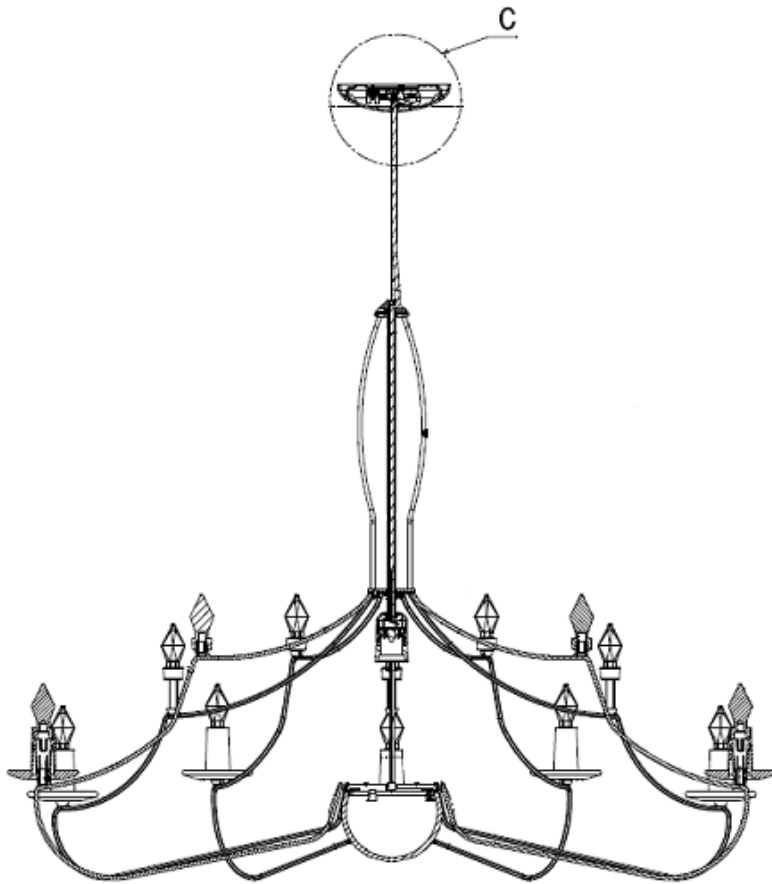

Remove the lamp body from the ceiling by operating on the ceiling rose assembly (C). Lay delicately the lamp down on a clean towel and position the lamp in away that will allow you to have access for replacing the lamp holder assembly.

REMARKS! For this operation it is necessary to ask other people to help you to keep the lamp body.

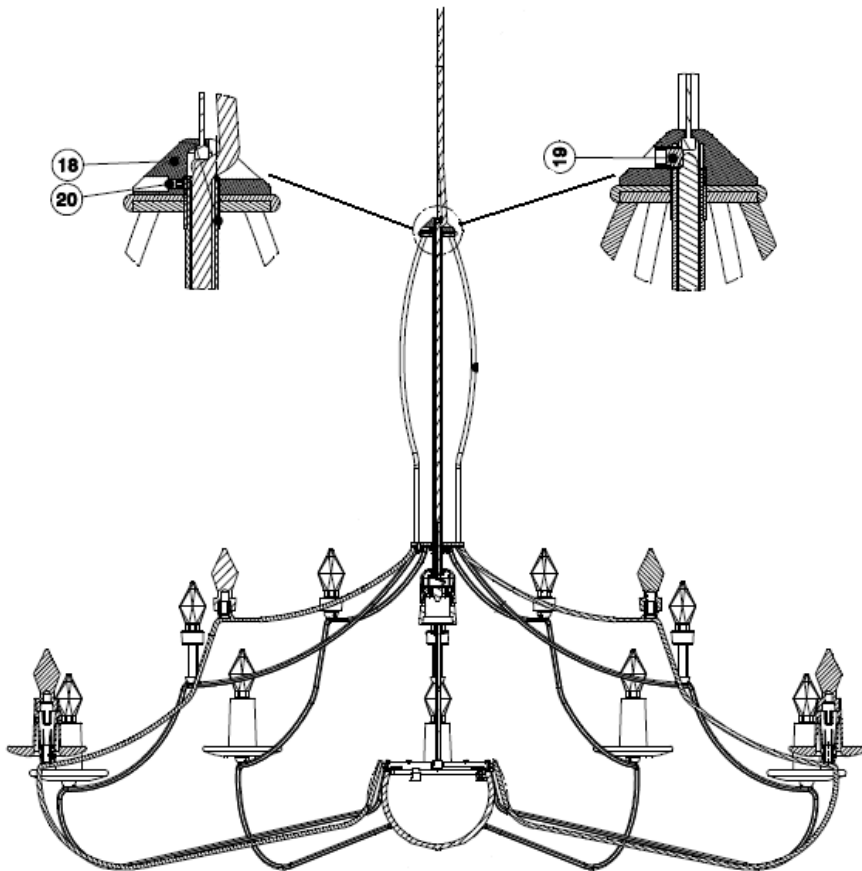


Loosen the screw (19) collocated near the lateral hole present at the top of the device by utilizing an Allen key.

Unfasten the white nylon cable clamp screw (20).

Unfasten the white conical cap (18) and then remove it from the assembly.

Remove the white cartridge from its slot.

To have access to the threaded stem, unfasten the nut

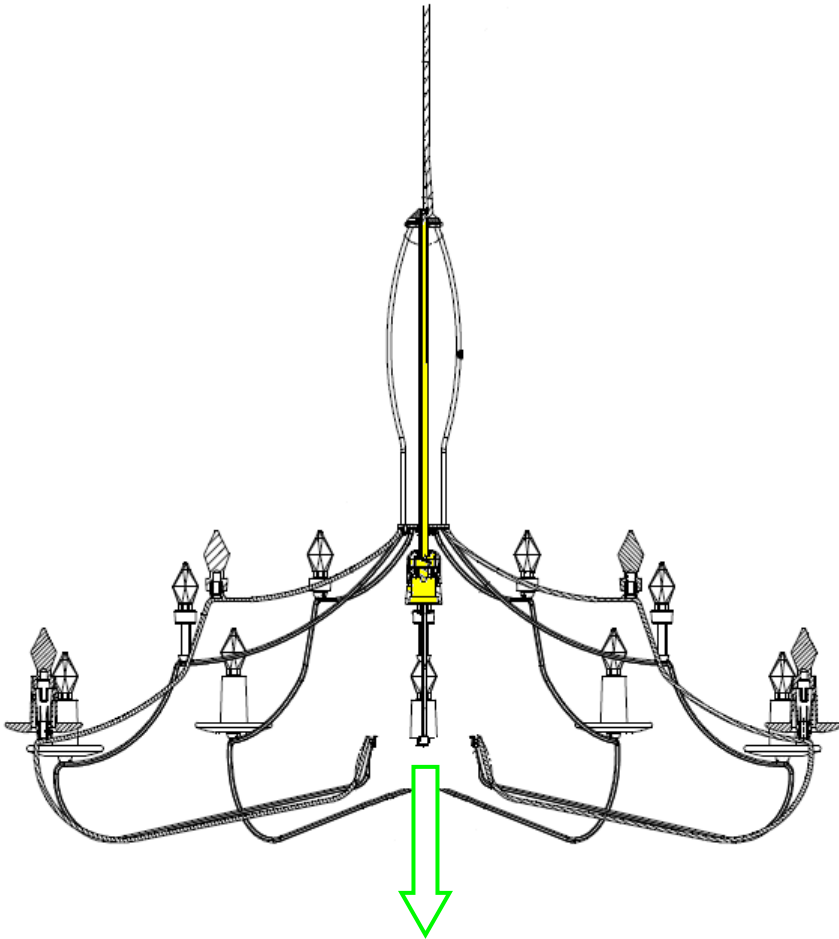

Remove the lampholder assembly by sliding the stem out from the lamp bottom hole.

ATTENTION! Cut and leave the transparent electric cable of the stem that is sliding-out, which will be utilized as a tow-rope for driving inside the lamp body the new electrical cable of the spare-part.

Then restore the lamp device by repeating all the above operations in opposite way.