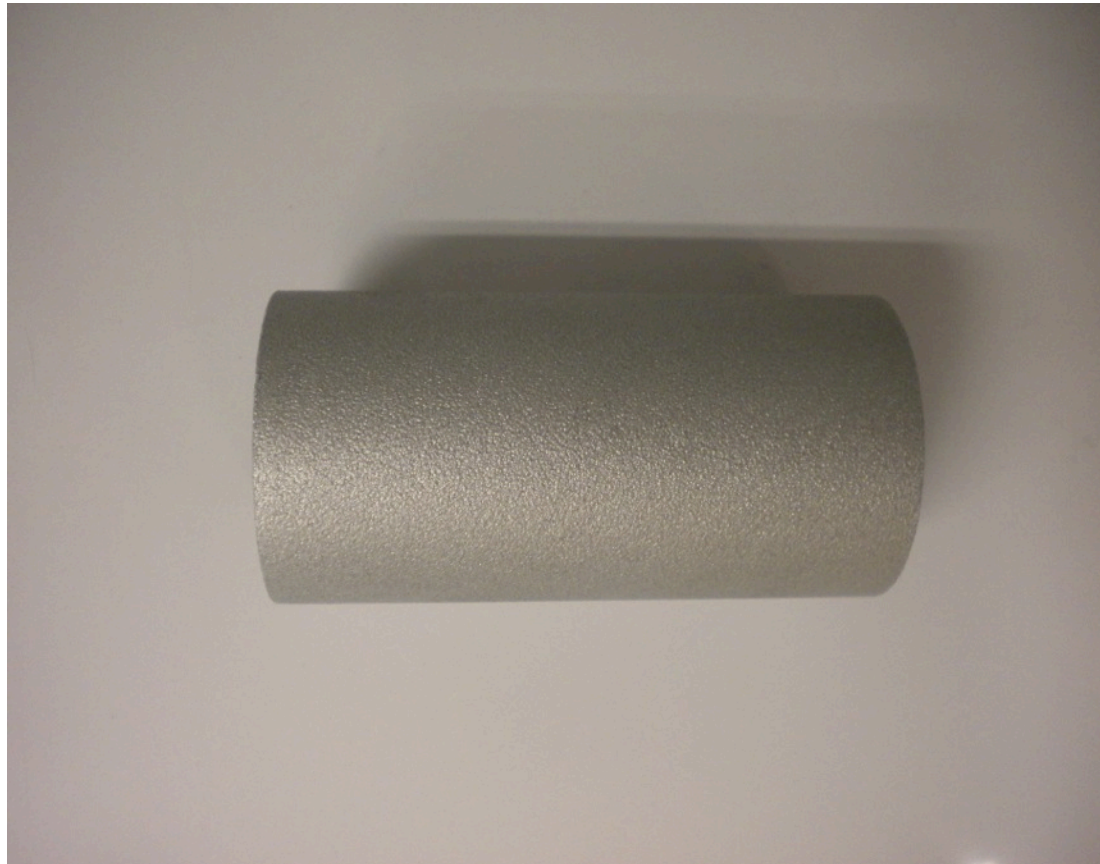
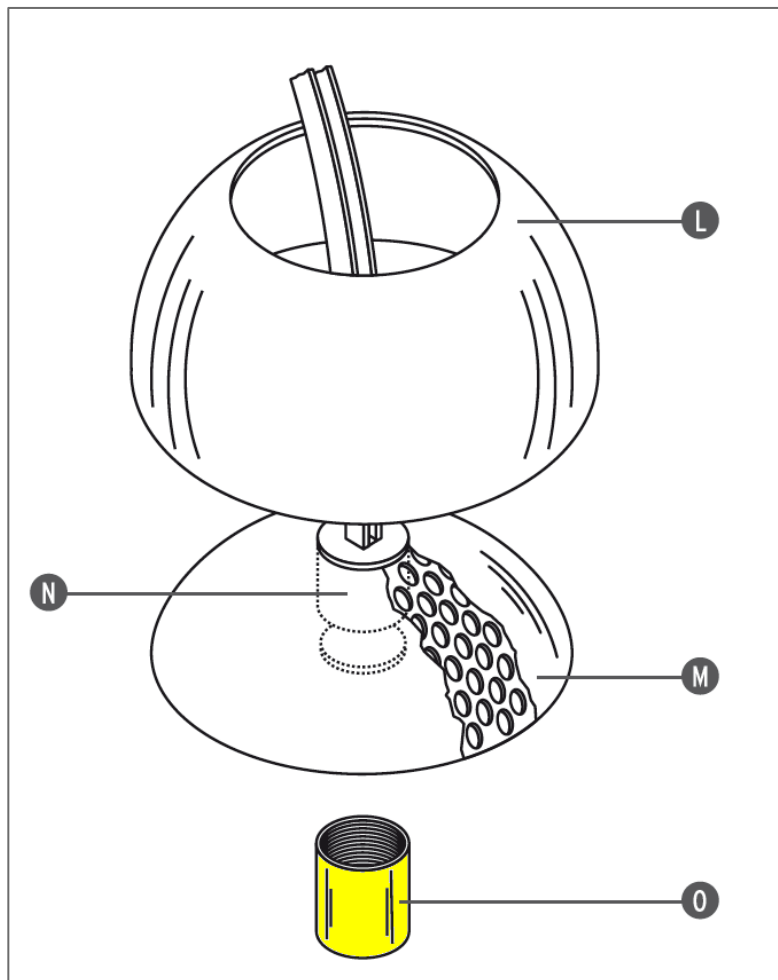

02593

ANODIZED SLEEVE





WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

Lock the reflector (L) and grid (M), by screwing the sleeve (O) to the lamp holder (N).