


POCHETTE BODY

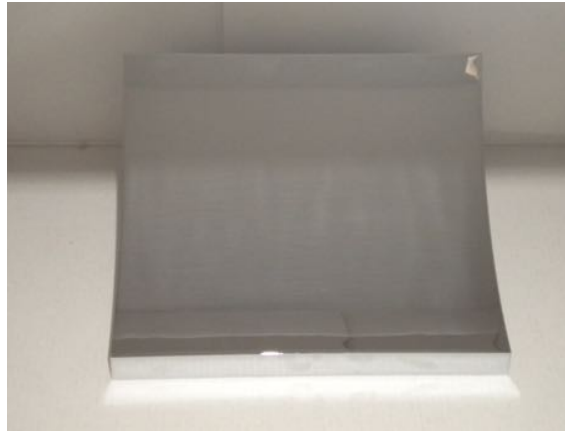


25611



25607



26142

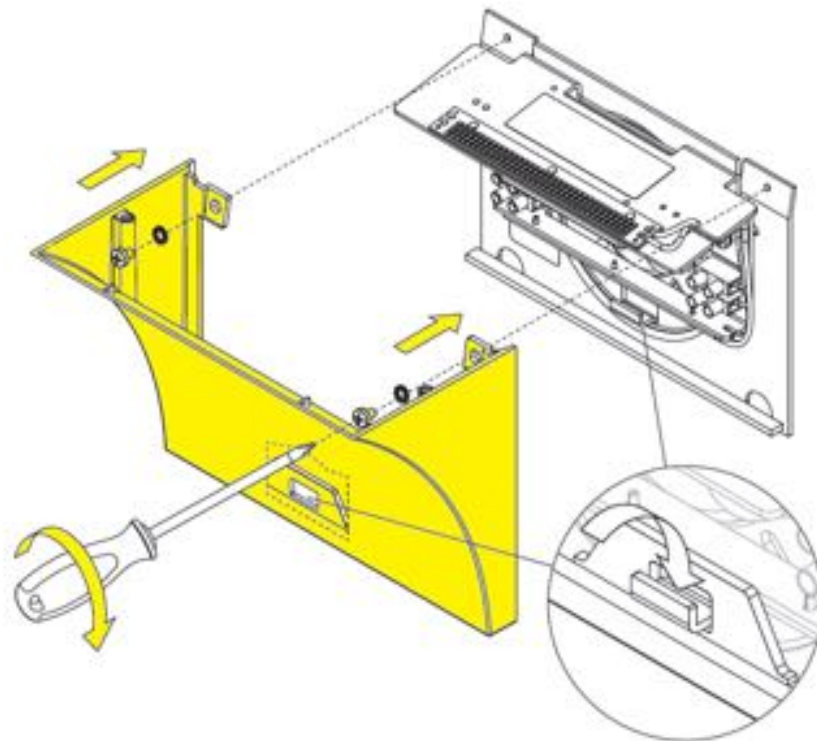

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

Install the lamp body (A) onto the wall attachment (C) and fasten the screws (B).