


**RF3020100**

**KIT OF QUANTITY 5 WHITE FEET PADS FOR BASE**



**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

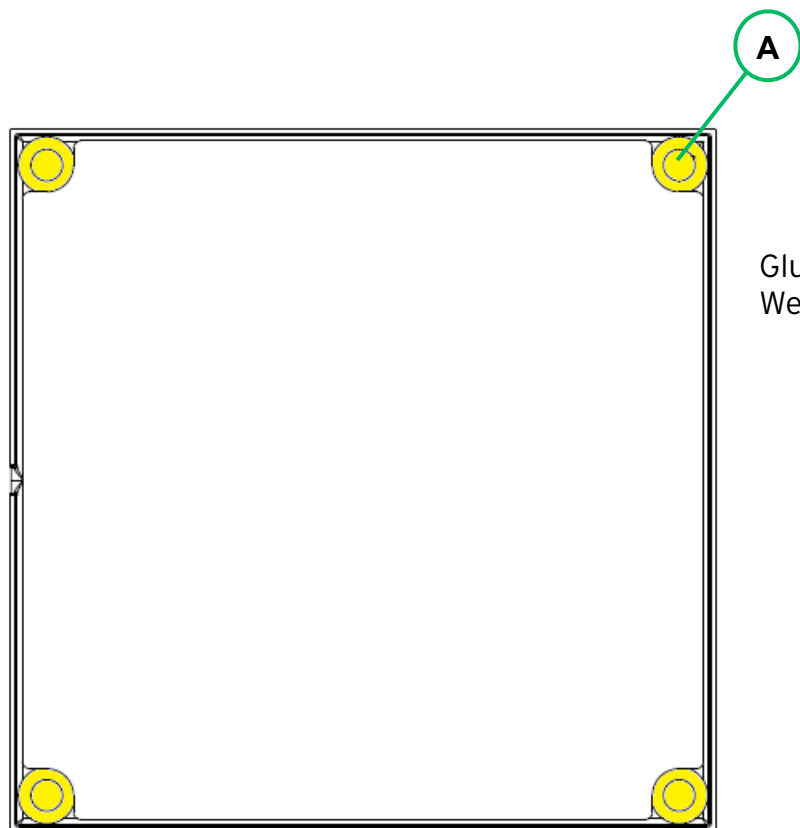

Glue the feet (A) to the base by utilizing glue.  
We advise to utilize the Loctite 454 glue.