


AIM LED AND REFLECTOR ASSEMBLY




RFU009000

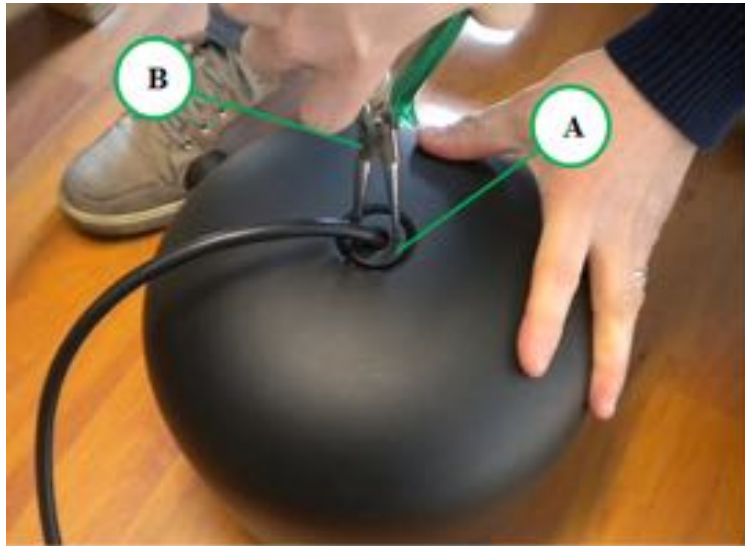

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. The installation should be done by an expertise electrician.





Remove the joint (A) by unfastening it with a pair of pliers (B).

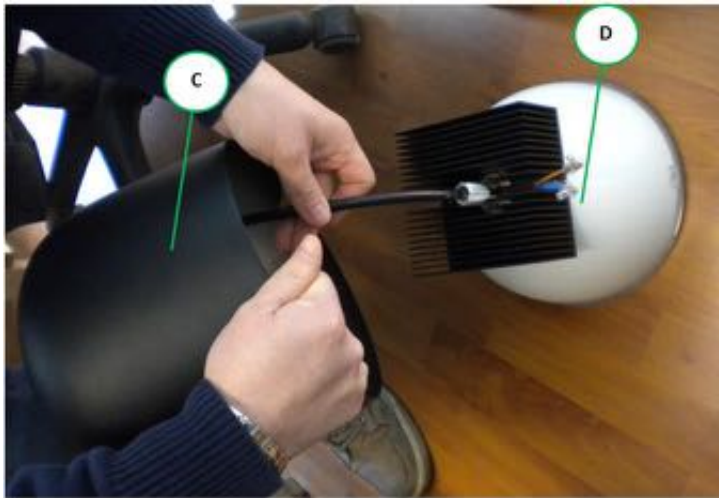


Lift-up the varnished body (C) from the internal body (D).

Unscrew the screw (E).

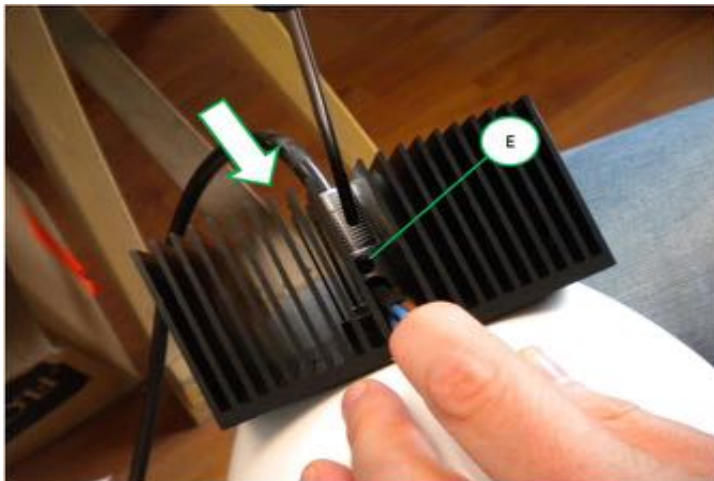


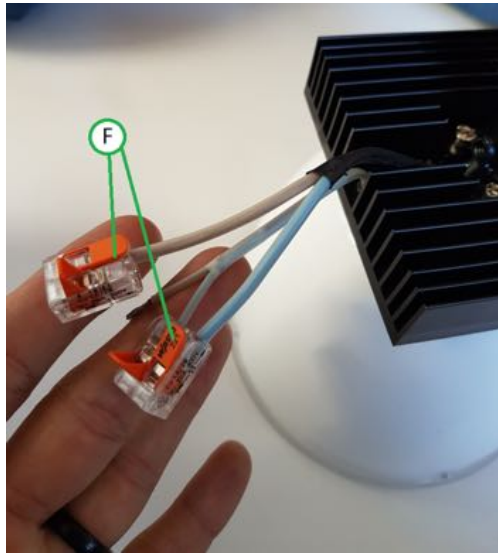

Disconnect the cables from the clamps (F).

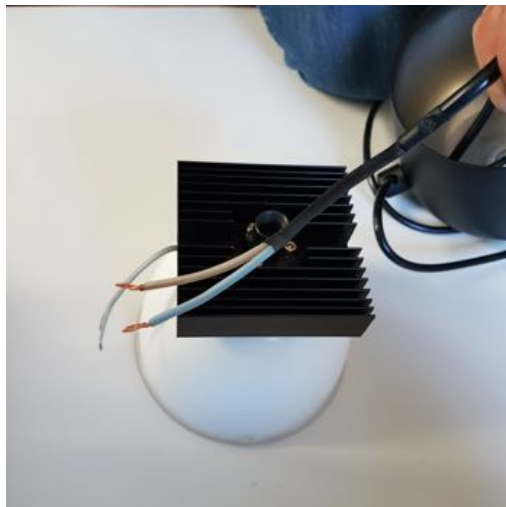



Loosen the electrical cable from the sink.

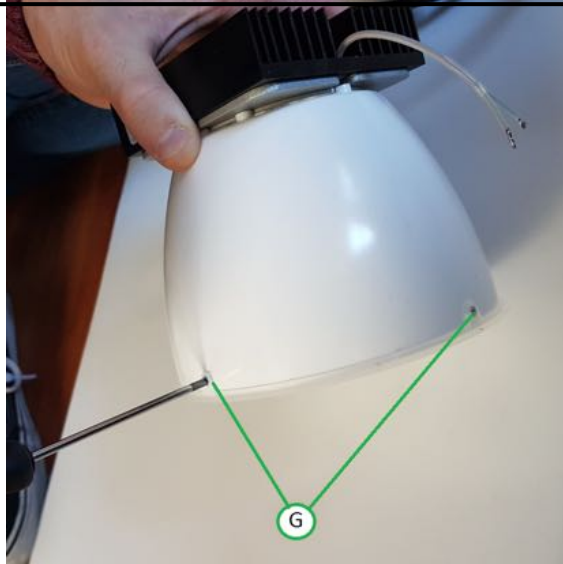


Screw the 4 screws (G) to the white reflector.

NOTE!
Do not screw too fast!!!

Insert the electrical cable in the sink.

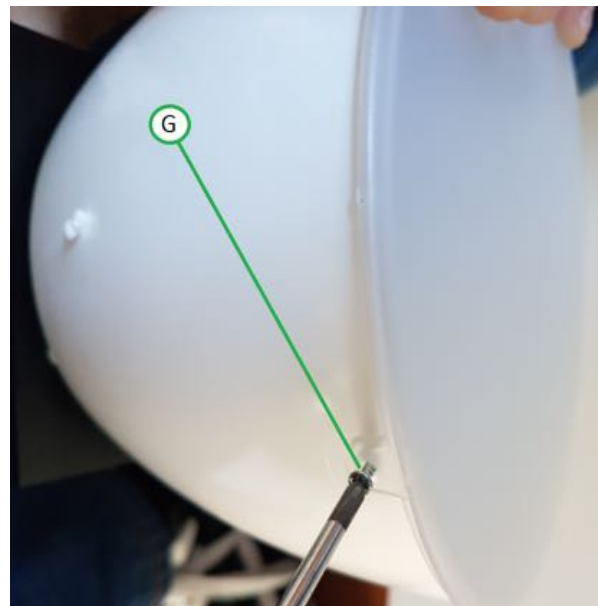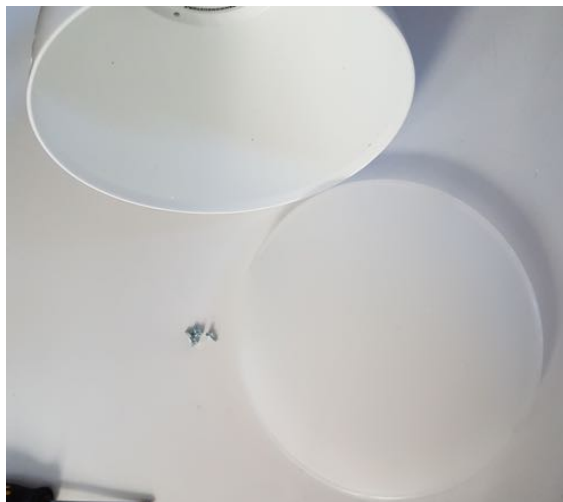

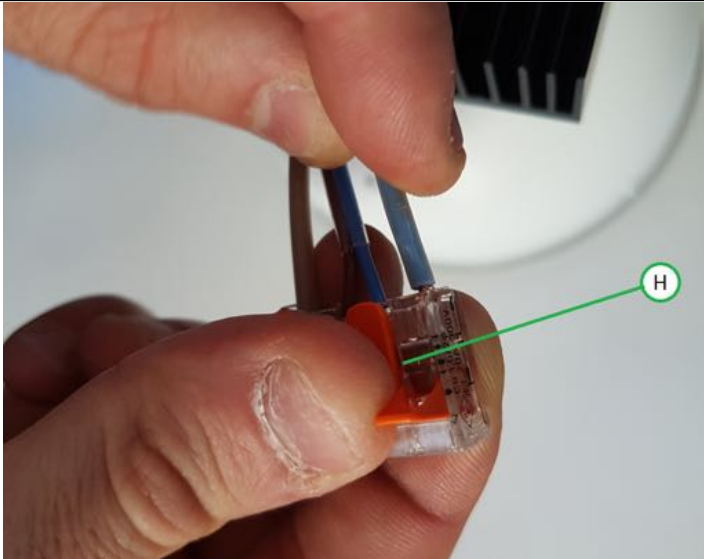



Connect the cables to the new clamps (H).

NOTE!

Respect the polarity of the cables.

Screw the screw to fix the electrical cable.

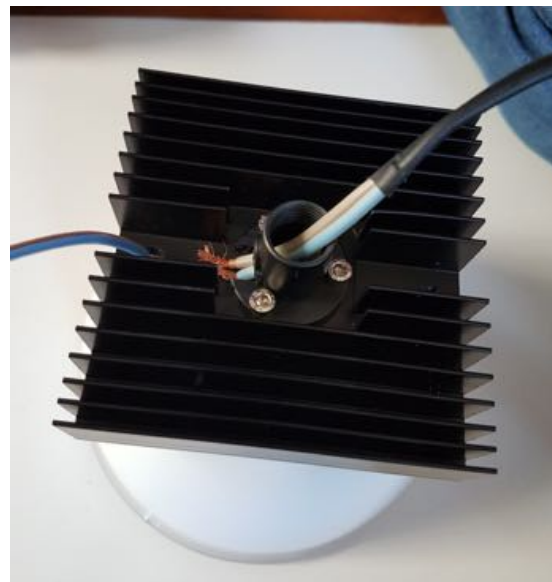


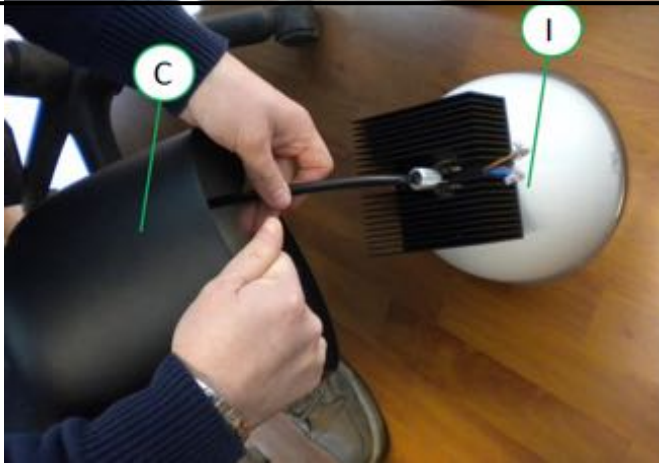

Insert the new internal body (D) in the varnished body (C).



Re-assemble the Joint (A).

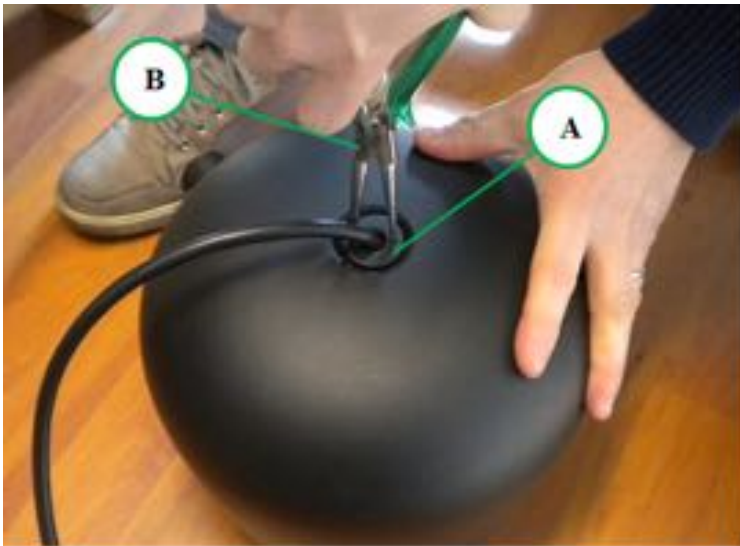

Screw the joint (A) with a pair of pliers (B).